

Leica CS10/CS15 & GS Sensors User Manual



Version 6.0
English

- when it has to be **right**

Leica
Geosystems

Introduction

Purchase

Congratulations on the purchase of a Leica SmartWorx Viva instrument.



This manual contains important safety directions as well as instructions for setting up the product and operating it. Refer to "1 Safety Directions" for further information. Read carefully through the User Manual before you switch on the product.

Product identification

The type and serial number of your product are indicated on the type plate. Enter the type and serial number in your manual and always refer to this information when you need to contact your agency or Leica Geosystems authorised service workshop.

Type: _____

Serial No.: _____



Trademarks



- Windows is a registered trademark of Microsoft Corporation in the United States and other countries
 - CompactFlash and CF are trademarks of SanDisk Corporation
 - Bluetooth® is a registered trademark of Bluetooth SIG, Inc.
 - SD Logo is a trademark of SD-3C, LLC.
- All other trademarks are the property of their respective owners.

Validity of this manual

This manual applies to the CS10/CS15, GS05/GS06, GS08plus/GS12 and CTR16 instruments. Differences between the various models are marked and described.

Available documentation

Name	Description/Format		
CS10/CS15 & GS Sensors Quick Guide	Provides an overview of the product together with technical data and safety directions. Intended as a quick reference guide.	✓	✓
CS10/CS15 & GS Sensors User Manual	All instructions required in order to operate the product to a basic level are contained in the User Manual. Provides an overview of the product together with technical data and safety directions.	-	✓

Name	Description/Format		
Viva GNSS Getting Started Guide	Describes the general working of the product in standard use. Intended as a quick reference field guide.	-	✓
Viva TPS Getting Started Guide	Describes the general working of the product in standard use. Intended as a quick reference field guide.	-	✓
Viva Series Technical Reference Manual	Overall comprehensive guide to the product and application functions. Included are detailed descriptions of special software/hardware settings and software/hardware functions intended for technical specialists.	-	✓

Refer to the following resources for all CS10/CS15 & GS Sensor documentation/software:

- the Leica USB documentation card
- <https://myworld.leica-geosystems.com>

myWorld@Leica Geosystems (<https://myworld.leica-geosystems.com>) offers a wide range of services, information and training material.

With direct access to myWorld, you are able to access all relevant services whenever it is convenient for you, 24 hours a day, 7 days per week. This increases your efficiency and keeps you and your equipment instantly updated with the latest information from Leica Geosystems.

Service	Description
myProducts	Simply add all Leica Geosystems products that you and your company own. View detailed information on your products, buy additional options or Customer Care Packages (CCPs), update your products with the latest software and keep up-to-date with the latest documentation.
myService	View the service history of your products in Leica Geosystems Service Centers and detailed information on the services performed on your products. For your products that are currently in Leica Geosystems Service Centers view the current service status and the expected end date of service.
mySupport	Create new support requests for your products that will be answered by your local Leica Geosystems Support Team. View the complete history of your Support and view detailed information on each request in case you want to refer to previous support requests.
myTraining	Enhance your product knowledge with the Leica Geosystems Campus - Information, Knowledge, Training. Study the latest online training material or download training material on your products. Keep up-to-date with the latest News on your products and register for Seminars or Courses in your country.

Table of Contents

In this manual	Chapter	Page
1	Safety Directions	6
1.1	General Introduction	6
1.2	Definition of Use	7
1.3	Limits of Use	7
1.4	Responsibilities	7
1.5	Hazards of Use	8
1.6	Electromagnetic Compatibility EMC	11
1.7	FCC Statement, Applicable in U.S.	12
2	Description of the System	15
2.1	Overview	15
2.2	Terminology	15
2.3	System Concept	15
2.3.1	Software Concept	15
2.3.2	Power Concept	17
2.3.3	Data Storage Concept	17
2.4	CS Components	18
2.4.1	CS10	18
2.4.2	CS15	19
2.5	Docking Station Components	20
2.6	GS08plus/GS12 Components	20
3	User Interface	21
3.1	Keyboard	21
3.2	Operating Principles	23
4	Operation	24
4.1	Equipment Setup	24
4.1.1	Fixing the Display Foil to the CS	24
4.1.2	Fixing a Hand Strap to the CS	24
4.1.3	Fixing the Slot Cover to the CS	25
4.1.4	Inserting and Removing a SIM Card	25
4.1.5	Setting up the Docking Station	26
4.1.6	Setting up as Handheld GNSS	26
4.1.7	Setting up as Robotic	27
4.1.8	Connecting to a Personal Computer	27
4.2	Power Functions	29
4.3	Batteries	30
4.3.1	Operating Principles	30
4.3.2	Changing the Battery	30
4.3.3	Charging the Battery	31
4.4	Working with the Memory Device	32
4.5	LED Indicators on CS10/CS15	33
4.6	LED Indicators on CTR16	34
4.7	LED Indicators on GS08plus/GS12	34
4.8	Using the Digital Camera	35
5	Care and Transport	36
5.1	Transport	36
5.2	Storage	36
5.3	Cleaning and Drying	36

6	Technical Data	38
6.1	CS10/CS15 Technical Data	38
6.2	GS05/GS06 Technical Data	39
6.2.1	Tracking Characteristics	39
6.2.2	Accuracy	40
6.2.3	Technical Data	40
6.3	CTR16 Technical Data	41
6.4	GS08plus/GS12	42
6.4.1	Tracking Characteristics	42
6.4.2	Accuracy	43
6.4.3	Technical Data	44
6.5	Antennas Technical Data	45
6.6	Conformity to National Regulations	46
6.6.1	CS10	46
6.6.2	CS15	47
6.6.3	CTR16	49
6.6.4	GS08plus	49
6.6.5	GS12	50
7	Software Licence Agreement	51
Appendix A	Pin Assignments and Sockets	52
A.1	CS10/CS15	52
A.2	GS08plus/GS12	53
Index		54

1 Safety Directions

1.1 General Introduction

Description

The following directions enable the person responsible for the product, and the person who actually uses the equipment, to anticipate and avoid operational hazards.

The person responsible for the product must ensure that all users understand these directions and adhere to them.

About Warning Messages





Warning messages are an essential part of the safety concept of the instrument. They appear wherever hazards or hazardous situations can occur.

Warning messages...

- make the user alert about direct and indirect hazards concerning the use of the product.
- contain general rules of behaviour.

For the users' safety, all safety instructions and safety messages shall be strictly observed and followed! Therefore, the manual must always be available to all persons performing any tasks described herein.




DANGER, WARNING, CAUTION and **NOTICE** are standardized signal words for identifying levels of hazards and risks related to personal injury and property damage. For your safety it is important to read and fully understand the table below with the different signal words and their definitions! Supplementary safety information symbols may be placed within a warning message as well as supplementary text.

Type	Description
 DANGER	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING	Indicates a potentially hazardous situation or an unintended use which, if not avoided, could result in death or serious injury.
 CAUTION	Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in minor or moderate injury.
NOTICE	Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in appreciable material, financial and environmental damage.
	Important paragraphs which must be adhered to in practice as they enable the product to be used in a technically correct and efficient manner.

1.2 Definition of Use

Intended use	<ul style="list-style-type: none">• Remote control of product.• Data communication with external appliances.• Recording measurements.• Computing with software.• Carrying out measurement tasks using various GNSS measuring techniques.• Recording GNSS and point related data.• Measuring raw data and computing coordinates using carrier phase and code signal from GNSS satellites.
Adverse use	<ul style="list-style-type: none">• Use of the product without instruction.• Use outside of the intended use and limits.• Disabling safety systems.• Removal of hazard notices.• Opening the product using tools, for example screwdriver, unless this is permitted for certain functions.• Modification or conversion of the product.• Use after misappropriation.• Use of products with recognisable damages or defects.• Use with accessories from other manufacturers without the prior explicit approval of Leica Geosystems.• Inadequate safeguards at the working site.• Controlling of machines, moving objects or similar monitoring application without additional control- and safety installations.

1.3 Limits of Use

Environment	Suitable for use in an atmosphere appropriate for permanent human habitation: not suitable for use in aggressive or explosive environments.
 DANGER	Local safety authorities and safety experts must be contacted before working in hazardous areas, or close to electrical installations or similar situations by the person in charge of the product.
	The following advice is only valid for battery charger, power adapter and car adapter.
Environment	Suitable for use in dry environments only and not under adverse conditions.
	

1.4 Responsibilities

Manufacturer of the product	Leica Geosystems AG, CH-9435 Heerbrugg, hereinafter referred to as Leica Geosystems, is responsible for supplying the product, including the user manual and original accessories, in a safe condition.
Person responsible for the product	The person responsible for the product has the following duties: <ul style="list-style-type: none">• To understand the safety instructions on the product and the instructions in the user manual.• To ensure that it is used in accordance with the instructions.• To be familiar with local regulations relating to safety and accident prevention.

- To inform Leica Geosystems immediately if the product and the application becomes unsafe.
- To ensure that the national laws, regulations and conditions for the operation of e.g. radio transmitters, lasers are respected.

1.5

Hazards of Use



DANGER

Because of the risk of electrocution, it is dangerous to use poles and extensions in the vicinity of electrical installations such as power cables or electrical railways.

Precautions:

Keep at a safe distance from electrical installations. If it is essential to work in this environment, first contact the safety authorities responsible for the electrical installations and follow their instructions.



WARNING

During dynamic applications, for example stakeout procedures there is a danger of accidents occurring if the user does not pay attention to the environmental conditions around, for example obstacles, excavations or traffic.

Precautions:

The person responsible for the product must make all users fully aware of the existing dangers.



WARNING

Inadequate securing of the working site can lead to dangerous situations, for example in traffic, on building sites, and at industrial installations.

Precautions:

Always ensure that the working site is adequately secured. Adhere to the regulations governing safety and accident prevention and road traffic.



CAUTION

If the accessories used with the product are not properly secured and the product is subjected to mechanical shock, for example blows or falling, the product may be damaged or people can sustain injury.

Precautions:

When setting-up the product, make sure that the accessories are correctly adapted, fitted, secured, and locked in position.

Avoid subjecting the product to mechanical stress.



WARNING

Incorrect fastening of the external antenna to vehicles or transporters poses the risk of the equipment being broken by mechanical influence, vibration or airstream. This may result in accident and physical injury.

Precautions:

Attach the external antenna professionally. The external antenna must be secured additionally, for example by use of a safety cord. Ensure that the mounting device is correctly mounted and able to carry the weight of the external antenna (>1 kg) safely.



WARNING

If the product is used with accessories, for example masts, staffs, poles, you may increase the risk of being struck by lightning.

Precautions:

Do not use the product in a thunderstorm.

⚠ DANGER

If the product is used with accessories, for example on masts, staffs, poles, you may increase the risk of being struck by lightning. Danger from high voltages also exists near power lines. Lightning, voltage peaks, or the touching of power lines can cause damage, injury and death.

Precautions:

- Do not use the product in a thunderstorm as you can increase the risk of being struck by lightning.
- Be sure to remain at a safe distance from electrical installations. Do not use the product directly under or close to power lines. If it is essential to work in such an environment contact the safety authorities responsible for electrical installations and follow their instructions.
- If the product has to be permanently mounted in an exposed location, it is advisable to provide a lightning conductor system. A suggestion on how to design a lightning conductor for the product is given below. Always follow the regulations in force in your country regarding grounding antennas and masts. These installations must be carried out by an authorised specialist.
- To prevent damages due to indirect lightning strikes (voltage spikes) cables, for example for antenna, power source or modem should be protected with appropriate protection elements, like a lightning arrester. These installations must be carried out by an authorised specialist.
- If there is a risk of a thunderstorm, or if the equipment is to remain unused and unattended for a long period, protect your product additionally by unplugging all systems components and disconnecting all connecting cables and supply cables, for example, instrument - antenna.

Lightning conductors

Suggestion for design of a lightning conductor for a GNSS system:

1) On non-metallic structures


Protection by air terminals is recommended. An air terminal is a pointed solid or tubular rod of conducting material with proper mounting and connection to a conductor. The position of four air terminals can be uniformly distributed around the antenna at a distance equal to the height of the air terminal.

The air terminal diameter should be 12 mm for copper or 15 mm for aluminium. The height of the air terminals should be 25 cm to 50 cm. All air terminals should be connected to the down conductors. The diameter of the air terminal should be kept to a minimum to reduce GNSS signal shading.

2) On metallic structures


Protection is as described for non-metallic structures, but the air terminals can be connected directly to the conducting structure without the need for down conductors.

Air terminal arrangement, plan view

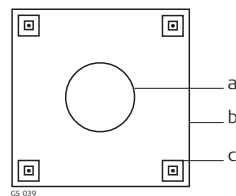

- a) Antenna
- b) Support structure
- c) Air terminal

Grounding the instrument/antenna

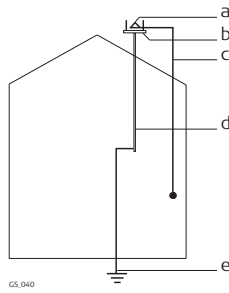

- a) Antenna
- b) Lightning conductor array
- c) Antenna/instrument connection
- d) Metallic mast
- e) Connection to earth



CAUTION

During the transport, shipping or disposal of batteries it is possible for inappropriate mechanical influences to constitute a fire hazard.

Precautions:

Before shipping the product or disposing of it, discharge the batteries by running the product until they are flat.

When transporting or shipping batteries, the person in charge of the product must ensure that the applicable national and international rules and regulations are observed. Before transportation or shipping contact your local passenger or freight transport company.



WARNING

High mechanical stress, high ambient temperatures or immersion into fluids can cause leakage, fire or explosions of the batteries.

Precautions:

Protect the batteries from mechanical influences and high ambient temperatures. Do not drop or immerse batteries into fluids.



WARNING

If battery terminals are short circuited e.g. by coming in contact with jewellery, keys, metalized paper or other metals, the battery can overheat and cause injury or fire, for example by storing or transporting in pockets.

Precautions:

Make sure that the battery terminals do not come into contact with metallic objects.



The following advice is only valid for power adapter and car adapter.



WARNING

If you open the product, either of the following actions may cause you to receive an electric shock.

- Touching live components
- Using the product after incorrect attempts were made to carry out repairs

Precautions:

Do not open the product. Only Leica Geosystems authorised service workshops are entitled to repair these products.



The following advice is only valid for power adapter or docking station.



WARNING

The product is not designed for use under wet and severe conditions. If unit becomes wet it may cause you to receive an electric shock.

Precautions:


Use the product only in dry environments, for example in buildings or vehicles. Protect the product against humidity. If the product becomes humid, it must not be used!



**WARNING**

If the product is improperly disposed of, the following can happen:

- If polymer parts are burnt, poisonous gases are produced which may impair health.
- If batteries are damaged or are heated strongly, they can explode and cause poisoning, burning, corrosion or environmental contamination.
- By disposing of the product irresponsibly you may enable unauthorised persons to use it in contravention of the regulations, exposing themselves and third parties to the risk of severe injury and rendering the environment liable to contamination.

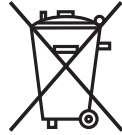Precautions:

The product must not be disposed with household waste.

Dispose of the product appropriately in accordance with the national regulations in force in your country.

Always prevent access to the product by unauthorised personnel.

Product-specific treatment and waste management information can be downloaded from the Leica Geosystems home page at <http://www.leica-geosystems.com/treatment> or received from your Leica Geosystems dealer.

**WARNING**

Only Leica Geosystems authorised service workshops are entitled to repair these products.

1.6**Electromagnetic Compatibility EMC****Description**

The term Electromagnetic Compatibility is taken to mean the capability of the product to function smoothly in an environment where electromagnetic radiation and electrostatic discharges are present, and without causing electromagnetic disturbances to other equipment.

**WARNING**

Electromagnetic radiation can cause disturbances in other equipment.

Although the product meets the strict regulations and standards which are in force in this respect, Leica Geosystems cannot completely exclude the possibility that other equipment may be disturbed.

**CAUTION**

There is a risk that disturbances may be caused in other equipment if the product is used with accessories from other manufacturers, for example field computers, personal computers or other electronic equipment, non-standard cables or external batteries.

Precautions:

Use only the equipment and accessories recommended by Leica Geosystems. When combined with the product, they meet the strict requirements stipulated by the guidelines and standards. When using computers or other electronic equipment, pay attention to the information about electromagnetic compatibility provided by the manufacturer.

**CAUTION**

Disturbances caused by electromagnetic radiation can result in erroneous measurements.

Although the product meets the strict regulations and standards which are in force in this respect, Leica Geosystems cannot completely exclude the possibility that the product may be disturbed by intense electromagnetic radiation, for example, near radio transmitters, two-way radios or diesel generators.

Precautions:

Check the plausibility of results obtained under these conditions.

**CAUTION**

If the product is operated with connecting cables attached at only one of their two ends, for example external supply cables, interface cables, the permitted level of electromagnetic radiation may be exceeded and the correct functioning of other products may be impaired.

Precautions:

While the product is in use, connecting cables, for example product to external battery, product to computer, must be connected at both ends.

Radios or digital cellular phones**WARNING**

Use of product with radio or digital cellular phone devices:

Electromagnetic fields can cause disturbances in other equipment, in installations, in medical devices, for example pacemakers or hearing aids and in aircraft. It can also affect humans and animals.

Precautions:

Although the product meets the strict regulations and standards which are in force in this respect, Leica Geosystems cannot completely exclude the possibility that other equipment can be disturbed or that humans or animals can be affected.

- Do not operate the product with radio or digital cellular phone devices in the vicinity of filling stations or chemical installations, or in other areas where an explosion hazard exists.
- Do not operate the product with radio or digital cellular phone devices near to medical equipment.
- Do not operate the product with radio or digital cellular phone devices in aircraft.

1.7**FCC Statement, Applicable in U.S.**

The greyed paragraph below is only applicable for products without radio.

**WARNING**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.


If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING**

Changes or modifications not expressly approved by Leica Geosystems for compliance could void the user's authority to operate the equipment.



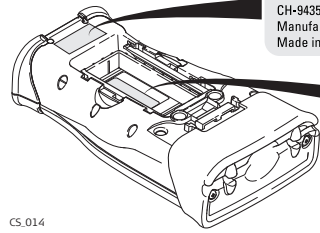

Labelling CS10




CS.014

Type:	S.No.:
Art.No.:	
Equip.No.:	
Power:	CE 0681
Leica Geosystems AG	FCC-ID:
CH-9435 Heerbrugg	Bluetooth QPL:
Manufactured:	IC:
Made in Switzerland	

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


 


Labelling CS15

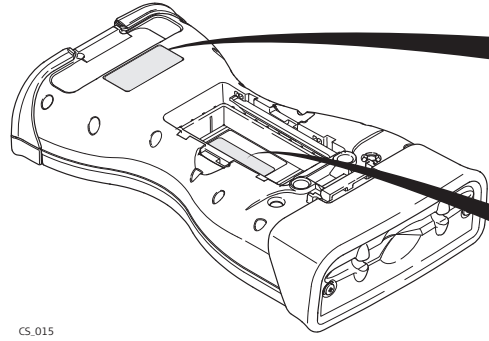


CS.015

Type:	S.No.:
Art.No.:	
Equip.No.:	
Power:	CE 0681
Leica Geosystems AG	FCC-ID:
CH-9435 Heerbrugg	Bluetooth QPL:
Manufactured:	IC:
Made in Switzerland	

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Labelling CTR16

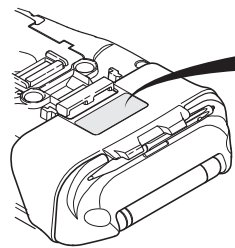


CS.032

Type: CTR16	
Equip.No.:	
FCC-ID: RFD-CTR16	
IC: 3177A-CTR16	
Leica Geosystems AG	
CH-9435 Heerbrugg	
Manufactured:	S.No.:
Made in Switzerland	Art.No.:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.





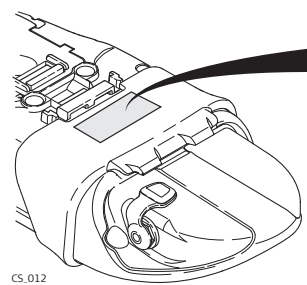

Labelling GS05, GS06




CS.012


Type:	Art.No.:
Equip.No.:	S.No.:
Leica Geosystems AG	
CH-9435 Heerbrugg	
Manufactured:	
Made in Canada	

Labelling GS08plus, GS12

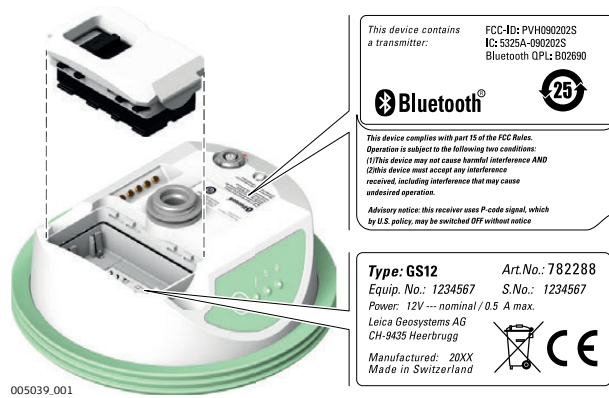

Labelling internal battery GEB211, GEB212

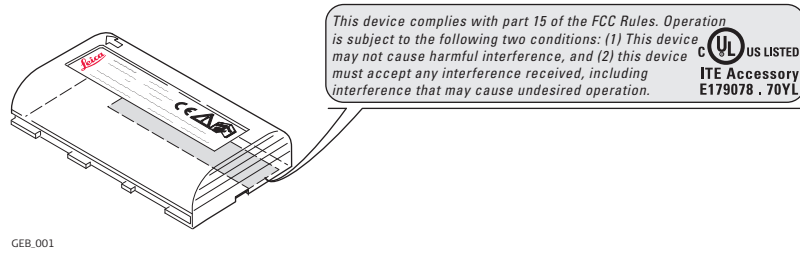

Exposure to radio frequency (RF) signals

The wireless device is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limit for exposure to radio frequency (RF) energy set by the OET Bulletin 65 Supplement C / Ministry of Health (Canada), Safety Code 6. These limits are part of comprehensive guidelines and established permitted levels of RF energy for the general population. These guidelines are based on the safety standards previously set by international standard bodies. These standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

This device has been shown to be capable of compliance for localised specific absorption rate (SAR) for uncontrolled environment / general public exposure limits specific in ANSI/IEEE C95.1-1992 and had been tested in accordance with the measurement procedures specified in IEEE Std. 1528-2003.

SAR compliance for body-worn operating configurations is limited to specific belt-clips, holsters or similar accessory configurations that have no metallic component in the assembly providing at least 1.0 cm separation distance between the device and the body of the user.



WARNING


This Class (B) digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe (B) est conforme à la norme NMB-003 du Canada.

2 Description of the System

2.1 Overview

System components

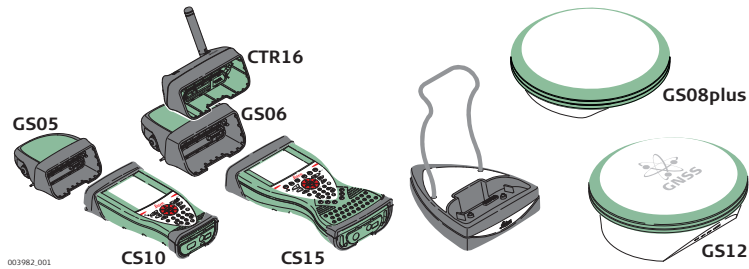


2.2 Terminology

CS general description

CS is a collective term describing the various models (CS10/CS15) of the multi-purpose field controller which is used with GNSS and TPS instruments.

CS available models

Model	Touch screen	Colour display	Internal radio modem	Internal 3.5 GSM/UMTS modem	Internal battery ^{*1}	SD card	CompactFlash card	Bluetooth	Wireless LAN 802.11b/g	Windows CE
Basic (CS10/CS15)	✓	✓	-	-	✓	✓	✓	✓	-	✓
Radio (CS10)	✓	✓	✓	-	✓	✓	✓	✓	✓	✓
3.5G (CS10/CS15)	✓	✓	-	✓	✓	✓	✓	✓	✓	✓

 Use the supplied stylus on the screens of the touch screen.

*1 removable

CS available radios

Radios for remote control (RCS) are available in the following variations:

Type	Description
CS10 with internal radio	Field controller with an integrated radio modem. This field controller has a colour display.
CS15 with CTR16, no internal radio	Field controller without integrated radio modem. A high performance wireless data transfer device (CTR16) can be attached. The field controller has a colour display.

2.3 System Concept

2.3.1 Software Concept

Software for all CS models

Software type	Description
CS firmware (CS_xx.fw)	This software includes: <ul style="list-style-type: none"> - The language-specific version of Windows CE. - The basic functionality of the CS.

Software for the GS05/GS06

Software type	Description
GS firmware (GS_xx.fw)	This software includes: - The firmware for the measurement engine.

Software for the GS08plus/GS12

Software type	Description
ME firmware (ME_xx.fw)	This software includes: - The firmware for the measurement engine.

Software upload



Uploading firmware can take some time. Ensure that the battery is at least 75% full before beginning the upload, and do not remove the battery during the upload process.

Software for	Description
All CS models	<p>The software is stored in the flash RAM of the CS field controller.</p> <p>CS firmware update instructions</p> <ul style="list-style-type: none"> • Download the most recent CS firmware file from https://myworld.leica-geosystems.com. Refer to "Introduction". • Connect the CS field controller to your PC. Refer to "4.1.8 Connecting to a Personal Computer". • Copy CS firmware file onto a folder on the Leica SD card, Leica CompactFlash card or USB stick. • Tap the Loader icon from the desktop, to run the Loader application. • Browse to the directory into which you copied CS firmware file, select it and start the upload. • A message will appear when the upload is complete. <p> Ensure that a Leica SD card or a Leica CF card is inserted into the CS field controller before starting the upload.</p>
GS05/GS06	<p>The software is stored in the flash RAM of the GS05/GS06.</p> <p>GS firmware update instructions</p> <ul style="list-style-type: none"> • Download the most recent GS firmware file from https://myworld.leica-geosystems.com. Refer to "Introduction". • Connect the CS field controller to your PC. Refer to "4.1.8 Connecting to a Personal Computer". • Copy GS firmware file into the /SYSTEM directory of the Leica SD card or Leica CompactFlash card. • Connect the GS05/GS06 to the CS field controller. Refer to "4.1.6 Setting up as Handheld GNSS". • Establish a connection between the GS05/GS06 and the CS field controller. Refer to the Leica Viva TechRef (Connections.. - GPS connection wizard). • Start the upload. Refer to the Leica Viva GNSS Getting Started Guide (Appendix B Uploading System Files). • A message will appear when the upload is complete.

Software for	Description
GS08plus/GS12	<p>The software is stored in the flash RAM of the GS08plus/GS12.</p> <p>ME firmware update instructions</p> <ul style="list-style-type: none"> • Download the most recent ME firmware file from https://myworld.leica-geosystems.com. Refer to "Introduction". • Connect the CS field controller to your PC. Refer to "4.1.8 Connecting to a Personal Computer". • Copy ME firmware file into the /SYSTEM directory of the Leica SD card or Leica CompactFlash card. • Connect the GS08plus/GS12 with the GEV234/GEV237 cable to the CS field controller and establish a connection between the GS08plus/GS12 and the CS field controller. Refer to the Leica Viva TechRef (Connections.. - GPS connection wizard). • Start the upload. Refer to the Leica Viva GNSS Getting Started Guide (Appendix B Uploading System Files). • A message will appear when the upload is complete.

2.3.2

Power Concept

General

Use the Leica Geosystems batteries, chargers and accessories or accessories recommended by Leica Geosystems to ensure the correct functionality of the instrument.

Power options

Model	Power supply
all CS models	<p>Internally by GEB211/GEB212 battery, OR</p> <p>Externally by docking station, OR</p> <p>Externally by GEV235 cable, OR</p> <p>Externally by GEV219 cable (only CS models with LEMO CBC01 connector module), OR</p> <p>Externally by GDC221 car adapter</p> <p>If an external power supply is connected and the internal battery is inserted, then the external power is used.</p>
CTR16	Externally by CS field controller
GS05/GS06	Externally by CS field controller
GS08plus/GS12	<p>Internally by GEB211/GEB212 battery, OR</p> <p>Externally by GEV219 cable</p> <p>If an external power supply is connected and the internal battery is inserted, then the external power is used.</p>

2.3.3

Data Storage Concept

Description

Data is stored on a memory device. The memory device can be an SD card, CompactFlash card, USB stick or internal memory.

Memory device

SD card: All CS field controllers have an SD card slot fitted as standard. An SD card can be inserted and removed. Available capacity: 1 GB.

CompactFlash card: All CS field controllers have a CF card slot fitted as standard. A CompactFlash card can be inserted and removed. Available capacity: 256 MB, 1 GB.

USB stick: All CS field controllers have a USB port fitted as standard.
Internal memory: All CS field controllers have an internal memory fitted as standard. Available capacity: 1 GB.

☞ While other SD cards or CompactFlash cards can be used, Leica Geosystems recommends to only use Leica SD cards or Leica CompactFlash cards and is not responsible for data loss or any other error that can occur while using a non-Leica card.



Removing the SD card, CompactFlash card or USB stick while the CS field controller is turned on can cause loss of data. Only remove the SD card, CompactFlash card or USB stick or unplug connecting cables when the CS field controller is switched off.

Transfer data

Data can be transferred in various ways. Refer to "4.1.8 Connecting to a Personal Computer".



CompactFlash cards and SD cards can directly be used in an OMNI drive as supplied by Leica Geosystems. Other PC card drives can require an adaptor.


2.4

CS Components

2.4.1

CS10


Upside of CS10

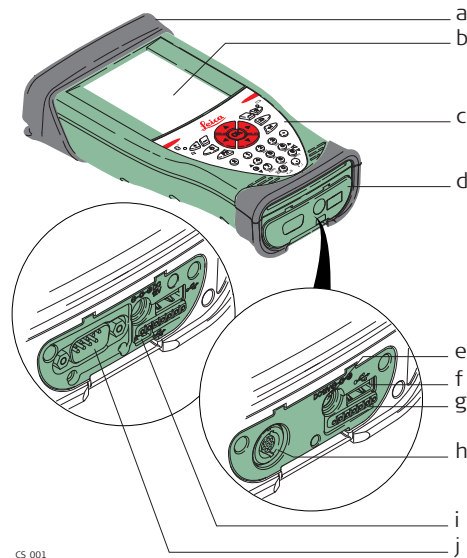

CS.001

- a) Slot Cover
- b) Screen
- c) Keyboard
- d) Port cover
- e) Power socket
- f) USB A Host port
- g) Docking station contacts
- h) LEMO port (USB and serial)
- i) USB Mini port
- j) DSUB9 port

Underside of CS10

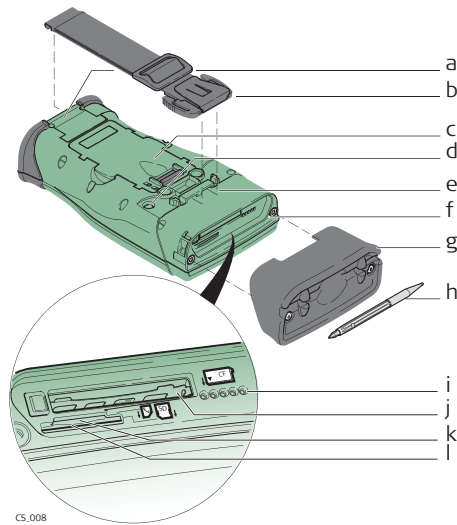


- a) Hand strap bottom clips
- b) Hand strap
- c) Battery compartment
- d) Digital camera
- e) Hand strap top clips
- f) Slots
- g) Slot cover
- h) Stylus
- i) GS05 contacts
- j) CompactFlash card slot
- k) SIM card slot
- l) SD card slot

2.4.2


CS15

Upside of CS15

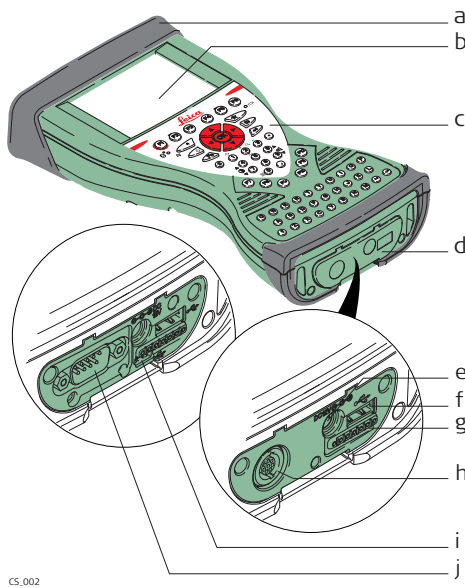

- a) Slot cover
- b) Screen
- c) Keyboard
- d) Port cover
- e) Power socket
- f) USB A Host port
- g) Docking station contacts
- h) LEMO port (USB and serial)
- i) USB Mini port
- j) DSUB9 port


Underside of CS15

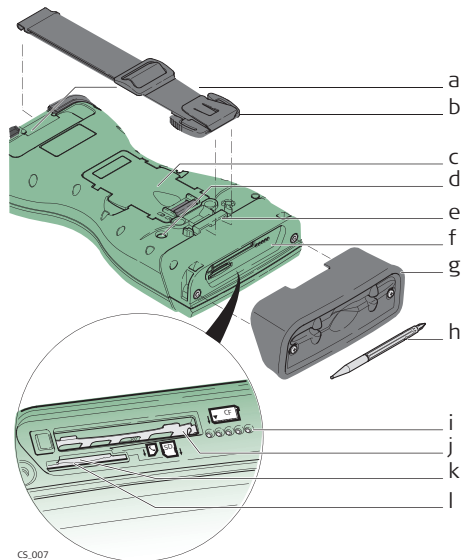

- a) Hand strap bottom clips
- b) Hand strap
- c) Battery compartment
- d) Digital camera
- e) Hand strap top clips
- f) Slots
- g) Slot cover
- h) Stylus
- i) GS06 contacts
- j) CompactFlash card slot
- k) SIM card slot
- l) SD card slot

2.5 Docking Station Components


Docking station

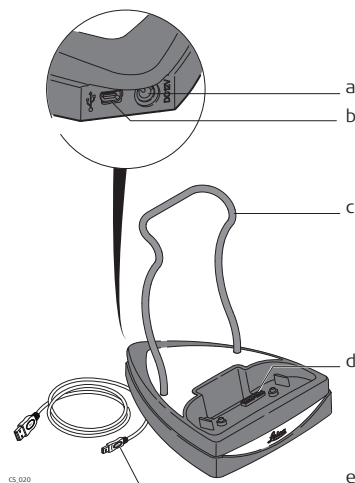

- a) Power socket
- b) USB port
- c) Docking station bracket
- d) Docking station contacts
- e) GEV223 data cable

2.6 GS08plus/GS12 Components

GS08plus/GS12 components

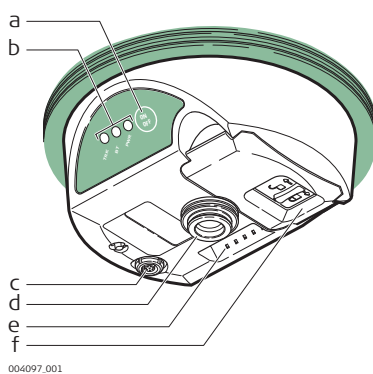


- a) ON/OFF button
- b) LEDs
- c) LEMO port including USB port
- d) Mechanical Reference Plane (MRP)
- e) Clip-on contacts (only GS12)
- f) Battery compartment

3 User Interface


3.1 Keyboard

Keyboard display CS10

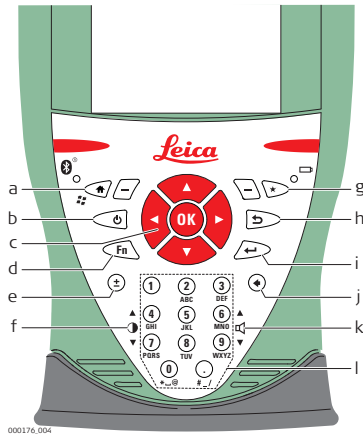

- a) Home
- b) ON/OFF
- c) Arrow keys, **OK**
- d) **Fn**
- e) ± key
- f) Brightness
- g) Favourites
- h) ESC
- i) Enter
- j) Backspace
- k) Volume
- l) Numeric keys



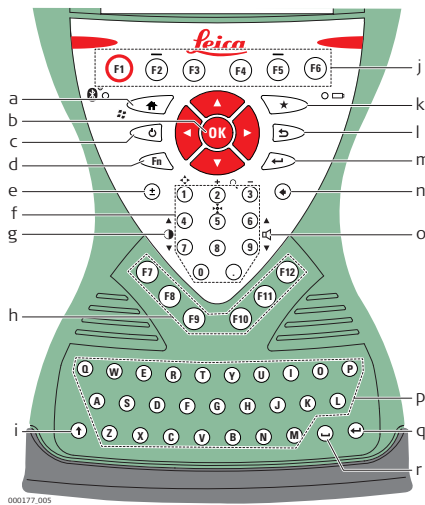




Keyboard display CS15













- a) Home
- b) Arrow keys, **OK**
- c) ON/OFF
- d) **Fn**
- e) ± key
- f) Numeric keys
- g) Brightness
- h) Function keys **F7 - F12**
- i) CAPS Lock
- j) Function keys **F1 - F6**
- k) Favourites
- l) ESC
- m) ENTER
- n) Backspace
- o) Volume
- p) Alpha keys
- q) ENTER
- r) SPACE

Keys

Key	Function
Function keys F1-F6	Correspond to six softkeys that appear on the bottom of the screen when the screen is activated.
Function keys F7-F12	User definable keys to execute chosen commands or access chosen screens.
Alpha keys	To type letters.
Numeric keys	To type numbers.
Caps Lock	Switches between upper case and lower case letters.
Backspace	Clears all entry at the beginning of user input. Clears the last character during user input.
Esc	Leaves the current screen without storing any changes.
Fn	Switches between the first and second level of function keys.

Key		Function
Space		Enters a blank.
Enter		Selects the highlighted line and leads to the next logical menu/ dialog. Starts the edit mode for editable fields. Opens a selectable list.
ON/OFF		If CS10/CS15 already off: Turns on CS10/CS15 when held for 2 s. If CS10/CS15 in stand-by mode: Turns on CS10/CS15 when held < 2 s. If CS10/CS15 already on: <ul style="list-style-type: none"> • Puts CS10/CS15 into stand-by mode when held < 2 s. Refer to "Stand-by". • Turns to Power Options menu when held for 2 s. Refer to "Power Options menu". • Turns off CS10/CS15 when held for 5 s.
Favourites		Goes to a website by simply clicking its name.
Home		Switches to the Windows CE Start Menu.
Arrow keys		Move the focus on the screen.
OK		Selects the highlighted line and leads to the next logical menu/ dialog. Starts the edit mode for editable fields. Opens a selectable list.

Key combinations

Key		Function
	+ 	Hold Fn while pressing 4 . Increase the screen brightness.
	+ 	Hold Fn while pressing 7 . Decrease the screen brightness.
	+ 	Hold Fn while pressing 6 . Increase the volume for acoustic warning signals, beeps and keypresses on the CS field controller.
	+ 	Hold Fn while pressing 9 . Decrease the volume for acoustic warning signals, beeps and keypresses on the CS field controller.
	+ 	Hold Fn while pressing . . Take a screenshot of the current SmartWorx Viva screen.

Keyboard and touch screen

The user interface is operated either by the keyboard or by the touch screen with supplied stylus. The workflow is the same for keyboard and touch screen entry, the only difference lies in the way information is selected and entered.

Operation by keyboard

Information is selected and entered using the keys. Refer to "3.1 Keyboard" for a detailed description of the keys on the keyboard and their function.

Operation by touch screen

Information is selected and entered on the screen using the supplied stylus.

Operation	Description
To select an item	Tap on the item.
To start the edit mode in editable fields	Tap on the editable field.
To highlight an item or parts of it for editing	Drag the supplied stylus from the left to the right.
To accept data entered into an editable field and exit the edit mode	Tap on the screen outside of the editable field.
To open a context-sensitive menu	Tap on the item and hold for 2 s.

4

Operation

4.1

Equipment Setup

4.1.1

Fixing the Display Foil to the CS




We strongly recommend to use the display foil to protect the display against scratches and dirt and to guarantee a trouble-free function of the touchscreen in extreme and humid weather conditions.
All instruments are delivered ex factory with an already fixed display foil.

Preparation

- Ensure that the display is free of dust and grease.
- Use the provided microfibre cloth to clean the display.
- Look for a dust free and dry atmosphere surrounding while fixing the display foil.

Fixing the display foil step-by-step

The display foil lies between two thin carrier foils. The display foil has a silver-coloured sticker to peel away the carrier foil from the actual display foil.

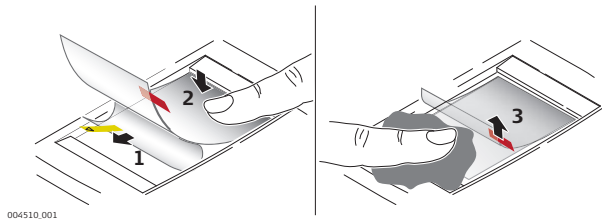


Step	Description
1.	Touch the yellow-coloured sticker with two fingers and pull it slowly upwards. The carrier foil is peeling away. Do not peel the carrier foil more than 2 cm - 3 cm away.
2.	Fix the adhesive underside of the display foil on the display edge. Peel away the carrier foil slowly and smooth it out gently onto the display.
3.	Remove the additional layer foil which has a red-coloured sticker.
4.	Potential air bubbles between display and display foil have to be smoothed out using the included microfibre cloth. Do not use sharp objects!
5.	In case of remaining dust or grease under the display foil or the need to replace the display foil, lift it again with some adhesive tape.

4.1.2

Fixing a Hand Strap to the CS

Fixing the CS to a hand strap step-by-step

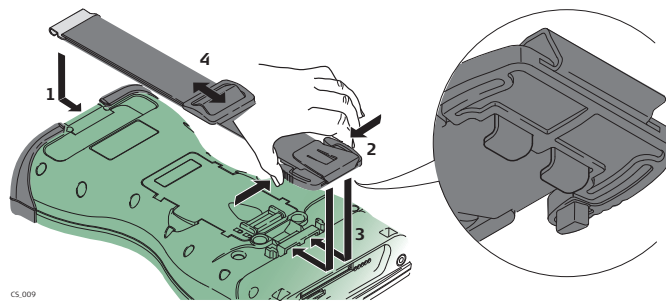


Step	Description
	Turn the CS field controller over.
1.	Take the end of the hand strap and clip it to the base of CS field controller.


Step	Description
2.	Compress the clips of the main hook.
3.	Lower the main hook onto the pivot knob of the CS field controller. A click can be felt when the clip is secure.
4.	Adjust the length of the hand strap.

4.1.3 Fixing the Slot Cover to the CS

Fixing the slot cover to the CS step-by-step

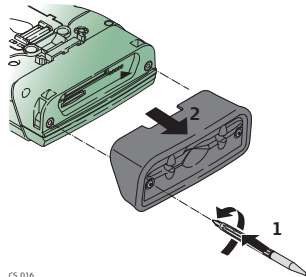


CS.016



Step	Description
1.	Press the screwdriver end of the supplied stylus on the quarter-turn screws and loosen them.
2.	Remove the slot cover.
	Reattach the slot cover with the stylus, making sure the quarter-turn screws are seated.

4.1.4 Inserting and Removing a SIM Card

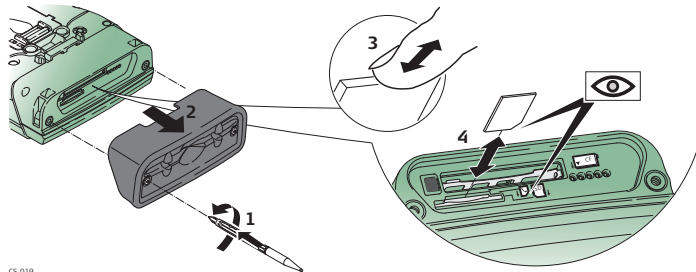Insert and remove a SIM card step-by-step




CS.019

	Description
	The SIM card is inserted into a slot inside the top of the CS10/CS15.
1.	Loosen the screws inside the slot cover on top of the CS10/CS15 using the screwdriver end of the stylus.
2.	Detach the slot cover from the CS10/CS15.
3.	Slide the card firmly into the slot until it clicks into position.  Do not force the card into the slot. The card should be held with the contacts facing the slot.
4.	Attach the slot cover and tighten the screws.
5.	To remove the card, detach the slot cover of the CS10/CS15.
6.	Gently press the top of the card to release it from the slot.
7.	Remove the SIM card and attach the slot cover.

4.1.5 Setting up the Docking Station

Mounting components of the docking station step-by-step

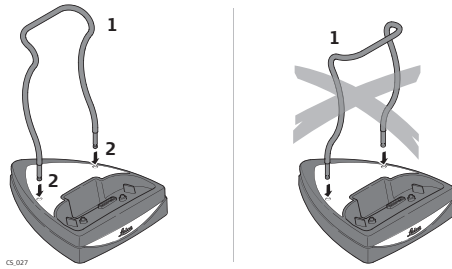


Step	Description
1.	Hold the docking station bracket as shown in the illustration in relation to the docking station rack.
2.	Slightly press the holder into the docking station rack. A click can be felt when the holder is secure.


4.1.6 Setting up as Handheld GNSS



The setup GS05/CS10 is identical to the setup GS06/CS15. For simplicity, the setup GS05/CS10 is used in the following.

Attaching the GS05 to the CS10 step-by-step

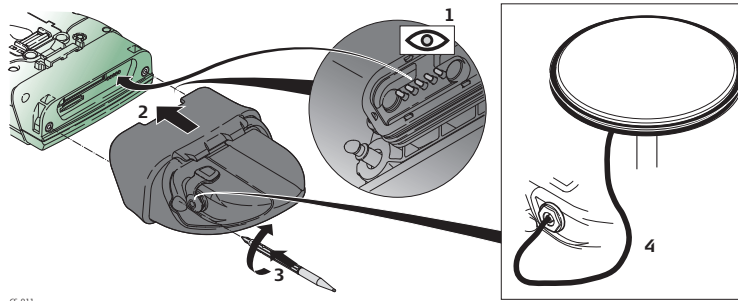


Step	Description
	Detach the slot cover from the CS10. Refer to "4.1.3 Fixing the Slot Cover to the CS".
1.	Check the position of the contacts in the inner surface of the GS05.
2.	Attach the GS05 to the CS10.
3.	Press the screwdriver end of the supplied stylus on the quarter-turn screws and tighten them.
4.	To achieve the optimal satellite tracking performance, mount the AS05 (external GNSS antenna) on the GS05.


4.1.7

Setting up as Robotic

Attaching the CTR16 to the CS15 step-by-step

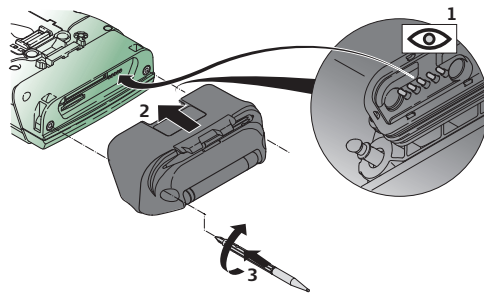

CS_011

Step	Description
	Detach the slot cover from the CS15. Refer to "4.1.3 Fixing the Slot Cover to the CS".
1.	Check the position of the contacts in the inner surface of the CTR16.
2.	Attach the CTR16 to the CS15.
3.	Press the screwdriver end of the supplied stylus on the quarter-turn screws and tighten them.


4.1.8

Connecting to a Personal Computer





Microsoft ActiveSync (for PCs with Windows XP operating system) or Windows Mobile Device Center (for PCs with Windows Vista or Windows 7/Windows 8 operating system) is the synchronisation software for Windows mobile-based pocket PCs. Microsoft ActiveSync or Windows Mobile Device Center enables a PC and a Windows mobile-based pocket PC to communicate.

Install Leica Viva USB drivers


Step	Description
1.	Start the PC.
2.	Insert the Leica Viva Series USB card.
3.	Run the SetupViva&GR_USB_XX.exe to install the drivers necessary for Leica Viva devices. Depending on the version (32bit or 64bit) of the operating system on your PC, you have to select between the three setup files following: <ul style="list-style-type: none"> • SetupViva&GR_USB_32bit.exe • SetupViva&GR_USB_64bit.exe • SetupViva&GR_USB_64bit_itanium.exe  The setup has to be run only once for all Leica Viva devices.
4.	The Welcome to InstallShield Wizard for Leica Viva & GR USB drivers window appears.  Ensure that all Leica Viva devices are disconnected from your PC before you continue!
5.	Next> .
6.	The Ready to Install the Program window appears.
7.	Install . The drivers will be installed on your PC.  For PCs with Windows Vista or Windows 7/Windows 8 operating system: If not already installed, Windows Mobile Device Center will be installed additionally.
8.	The InstallShield Wizard Completed window appears.
9.	Check I have read the instructions and click Finish to exit the wizard.


Connect USB cable to PC for the first time step-by-step

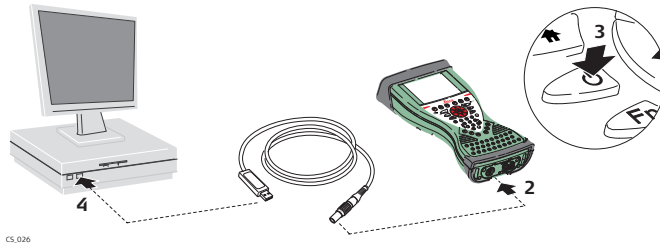




Step	Description
1.	Start the PC.
2.	Plug the GEV234 cable into CS field controller.  For CS field controllers with DSUB9 connector, the GEV223 cable has to be used.
3.	Turn on the CS field controller.
4.	Plug the GEV234 cable into the USB port of the PC. The Found New Hardware Wizard starts up automatically.
5.	Check Yes, this time only. Next> .
6.	Check Install the software automatically (Recommended). Next> . The software for Remote NDIS based LGS CS Device will be installed on your PC.
7.	Finish.
8.	The Found New Hardware Wizard starts up automatically a second time.
9.	Check Yes, this time only. Next> .
10.	Check Install the software automatically (Recommended). Next> . The software for LGS CS USB Device will be installed on your PC.
11.	Finish.
	For PCs with Windows XP operating system:
12.	Run the ActiveSync installation program if not already installed.
13.	Allow USB connections inside the Connection Settings window of ActiveSync.
	For PCs with Windows Vista or Windows 7 operating system:
14.	Windows Mobile Device Center starts up automatically. If does not start automatically, start Windows Mobile Device Center.

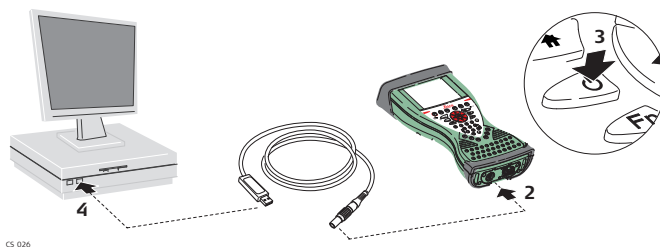Connect to PC via USB cable step-by-step





Step	Description
1.	Start the PC.
2.	Plug the GEV234 cable into CS field controller.  For CS field controllers with DSUB9 connector, the GEV223 cable has to be used.
3.	Turn the CS field controller on.
4.	Plug the GEV234 cable into the USB port of the PC.

Step	Description
	For PCs with Windows XP operating system:  ActiveSync starts up automatically. If does not start automatically, start ActiveSync. If not already installed, run the ActiveSync installation program.
5.	Allow USB connections inside the Connection Settings window of ActiveSync.
6.	Click Explore in ActiveSync.  The folders on the CS field controller are displayed under Mobile Devices . The folders of the data storage device can be found in StorageCard .
	For PCs with Windows Vista or Windows 7 operating system:  Windows Mobile Device Center starts up automatically. If does not start automatically, start Windows Mobile Device Center.



4.2

Power Functions



Turning CS field controller on

Press and hold power key () for 2 s.
 CS field controller must have a power supply.



Turning CS field controller off


Press and hold power key () for 5 s.
 CS field controller must be on.

Putting CS field controller into stand-by

Press and hold power key () < 2 s.
 CS field controller must be on.

Power Options menu

Press and hold power key () for 2 s to open **Power Options** menu.
 CS field controller must be on.

Option	Description
Turn off	Turn CS field controller off.
Stand-by	Put CS field controller into stand-by mode.  In stand-by mode, CS field controller shuts down and reduces power consumption. Rebooting from stand-by mode is quicker than a cold start after turning off.
Lock keyboard	Lock the keyboard. Option turns to Unlock keyboard .
Turn off touch screen	Disable touch screen. Option turns to Turn on touch screen .
Reset...	Perform one of the following options: <ul style="list-style-type: none"> • Restart (restarts Windows CE) • Reset Windows CE (resets Windows CE and communication settings to factory defaults) • Reset installed software (resets settings of all installed software) • Reset Windows CE and installed software (resets Windows CE and settings of all installed software)

**Turn on
GS08plus/GS12**

To turn on the instrument press and hold the ON/OFF button for 2 s.

**Turn off
GS08plus/GS12**

To turn off the instrument press and hold the ON/OFF button for 2 s.

4.3

Batteries

4.3.1

Operating Principles

**Charging / first-time
use**

- The battery must be charged prior to using it for the first time because it is delivered with an energy content as low as possible.
- The permissible temperature range for charging is between 0°C to +40°C/ +32°F to +104°F. For optimal charging, we recommend charging the batteries at a low ambient temperature of +10°C to +20°C/+50°F to +68°F if possible.
- It is normal for the battery to become warm during charging. Using the chargers recommended by Leica Geosystems, it is not possible to charge the battery if the temperature is too high.
- For new batteries or batteries that have been stored for a long time (> three months), it is effectual to make only one charge/discharge cycle.
- For Li-Ion batteries, a single discharging and charging cycle is sufficient. We recommend carrying out the process when the battery capacity indicated on the charger or on a Leica Geosystems product deviates significantly from the actual battery capacity available.


**Operation /
Discharging**


- The batteries can be operated from -20°C to +55°C/-4°F to +131°F.
- Low operating temperatures reduce the capacity that can be drawn; high operating temperatures reduce the service life of the battery.

4.3.2


Changing the Battery

**Insert and remove
the battery on the
CS field controller
step-by-step**

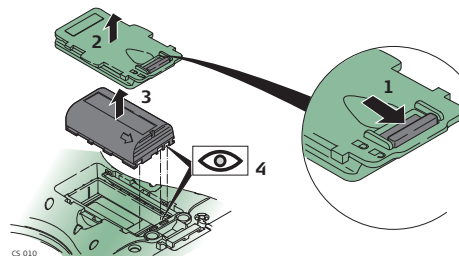

Step	Description
	Turn CS field controller over to gain access to the battery compartment.
1.	Push the slide fastener in the direction of the arrow with the open-lock symbol.
2.	Open the battery compartment.
3.	Pull the battery from the battery compartment.
4.	Place the battery into the battery compartment with the Leica logo facing to the top.
5.	Close the battery compartment by pushing the slide fastener in the direction of the arrow with the close-lock symbol.


Insert and remove the battery on the GS08plus/GS12 step-by-step

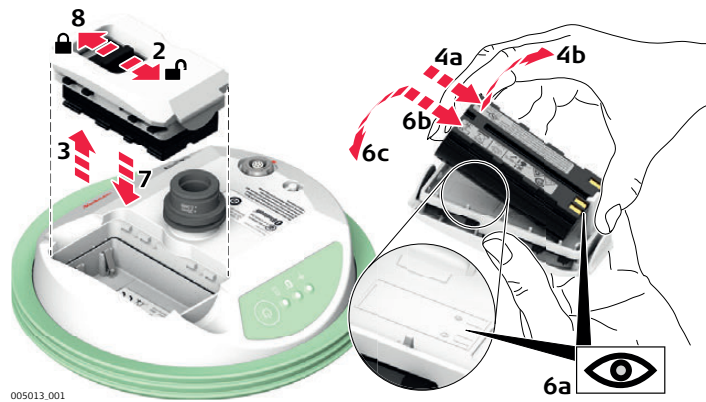

Step	Description
1.	Turn GS08plus/GS12 over to gain access to the battery compartment.
2.	Open the battery compartment by pushing the slide fastener in the direction of the arrow with the open-lock symbol.
3.	Pull out the battery housing. The battery is attached to the housing.
4.	Hold the battery housing and pull the battery from the battery housing.
5.	A polarity of the battery is displayed inside the battery housing. This is a visual aid to assist in placing the battery correctly.
6.	Place the battery onto the battery housing, ensuring that the contacts are facing outward. Click the battery into position.
7.	Close the battery compartment by pushing the slide fastener in the direction of the arrow with the close-lock symbol.

4.3.3 Charging the Battery

Charge battery step-by-step

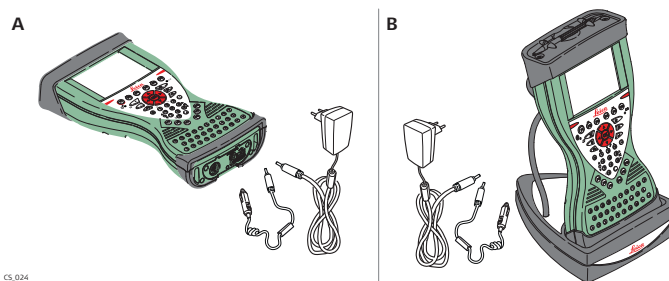

Step	Description
1.	Connect the GEV235 power adapter or GDC221 car adapter with the CS field controller (A) or the docking station (B) and an A/C plug.
2.	The power LED on the CS field controller switches on. When CS field controller's battery is fully charged the LED switches off again. Refer to "LED indicators" for information about the power LED.

Charge battery for GS08plus/GS12

To charge the batteries for GS08plus/GS12, use the Leica Geosystems chargers GKL211 or GKL221. Refer to the GKL211 or GKL221 User Manual for further information.

4.4

Working with the Memory Device




- Keep the card dry.
- Use it only within the specified temperature range.
- Do not bend the card.
- Protect the card from direct impacts.



Failure to follow these instructions could result in data loss and/or permanent damage to the card.


Insert and remove a CompactFlash card step-by-step

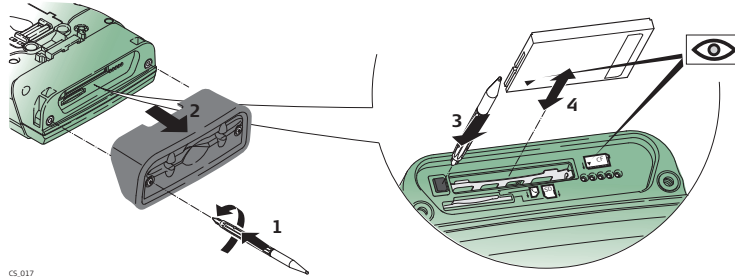

CS.017


Step	Description
	The CompactFlash card is inserted into a slot inside the top of the CS10/CS15.
1.	Refer to "Fixing the slot cover to the CS step-by-step". Loosen the screws inside the slot cover on top of the CS10/CS15 using the screwdriver end of the stylus.
2.	Detach the slot cover from the CS10/CS15.
3.	Slide the card firmly into the slot until it clicks into position. Do not force the card into the slot.
4.	The card must be held with the contacts facing the slot.
5.	Attach the slot cover and tighten the screws.
6.	To remove the card, detach the slot cover of the CS10/CS15.
7.	Press the eject button next to the card slot twice.
8.	Remove the CompactFlash card and attach the slot cover.

Insert and remove an SD card step-by-step

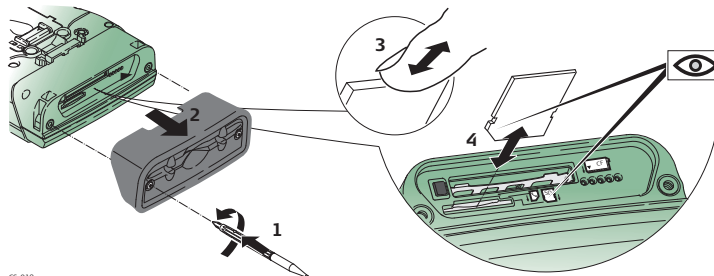

CS.018

Step	Description
	The SD card is inserted into a slot inside the top of the CS10/CS15.
1.	Refer to "Fixing the slot cover to the CS step-by-step". Loosen the screws inside the slot cover on top of the CS10/CS15 using the screwdriver end of the stylus.
2.	Detach the slot cover from the CS10/CS15.

Step	Description
3.	Slide the card firmly into the slot until it clicks into position.  Do not force the card into the slot.
4.	The card must be held with the contacts facing the slot.
5.	Attach the slot cover and tighten the screws.
6.	To remove the card, detach the slot cover of the CS10/CS15.
7.	Gently press the top of the card to release it from the slot.
8.	Remove the SD card and attach the slot cover.

4.5


LED Indicators on CS10/CS15

LED indicators

Description

The CS field controller has **L**ight **E**mitting **D**iode indicators. They indicate the basic field controller status.

Diagram

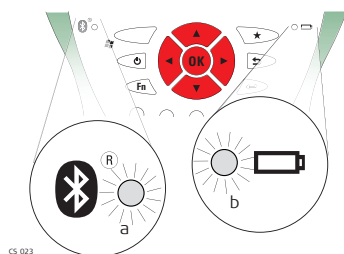

- a) Bluetooth LED
- b) Power LED

Description of the LEDs

IF the	is	THEN
Bluetooth LED	green	Bluetooth is in data mode and ready for connecting.
	purple	Bluetooth is connecting.
	blue	Bluetooth has connected.
	flashing blue	data is being transferred
Power LED	off	power is off.
	green	power is okay.
	flashing green	power is okay. The battery is being charged.
	yellow	power is low. The remaining time for which enough power is available depends on the use of wireless modules, the temperature and the age of the battery.
	flashing yellow	power is low. The remaining time for which enough power is available depends on the use of wireless modules, the temperature and the age of the battery. The battery is being charged.
	red	power is very low. The battery should be changed.
	flashing red	power is very low. The battery is being charged.

4.6


LED Indicators on CTR16

LED indicators

Description

The CTR16 has a Light Emitting Diode indicator. It indicates the basic radio status.

Diagram

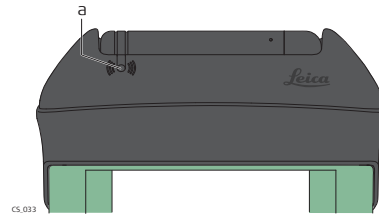

a) TPS radio LED

Description of the LEDs

IF the	is	THEN
TPS radio LED	green	radio is in data mode and ready for connecting.
	orange	the CTR16 is in configuration mode
	purple	radio is connecting.
	blue	radio has connected.
	flashing blue	data is being transferred.
	red	the CTR16 is not ready to be used.

4.7


LED Indicators on GS08plus/GS12

LED indicators

Description

The GS08plus/GS12 instrument has Light Emitting Diode indicators. They indicate the basic instrument status.

Diagram

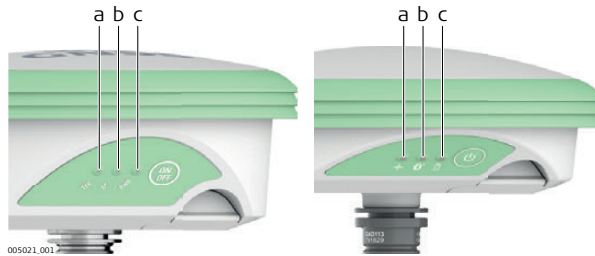

- a) Tracking LED (TRK)
- b) Bluetooth LED (BT)
- c) Power LED (PWR)

Description of the LEDs

IF the	is	THEN
TRK LED	off	No satellites are tracked.
	flashing green	Less than four satellites are tracked, a position is not yet available.
	green	Enough satellites are tracked to compute a position.
	red	GS08plus/GS12 instrument is initialising.


IF the	is	THEN
BT LED	green	Bluetooth is in data mode and ready for connecting.
	purple	Bluetooth is connecting.
	blue	Bluetooth has connected.
	flashing blue	Data is being transferred.
GS12 PWR LED	off	Power is off.
	green	Power is okay.
	flashing green	Power is low. The remaining time for which enough power is available depends on the type of survey, the temperature and the age of the battery.
GS08plus PWR LED	off	Power is off.
	green	Power is 100% - 20%.
	red	Power is 20% - 5%.
	flashing red	Power is low (<5%). The remaining time for which enough power is available depends on the type of survey, the temperature and the age of the battery.

4.8 Using the Digital Camera


Overview

Both CS field controllers are equipped with a digital camera located at the underside (refer to "2.4 CS Components"). If a hand strap or pole holder plate is mounted, the camera view is not limited. The camera application can be started from the desktop icon **Camera** or from the Start menu **Start - Programs - Camera**.

Taking a picture step-by-step

Step	Description
1.	Aim the camera to the desired target.
2.	Check the view at the display.
3.	Press OK or click Capture to take the picture.  Capture changes to Save .
4.	Press OK again or click Save to open the Save As dialog.
5.	Click Discard to reject the picture.

Storing a picture step-by-step

Step	Description
	The Save As dialog is Windows CE standard and allows to name the picture, choose the location or to create a folder.
1.	Browse to the desired folder or create a new one.
2.	Name the picture.
3.	Press OK to save it and return to the camera view.
4.	Press Cancel to reject the picture and to return to the camera view without saving the picture.

5 Care and Transport

5.1 Transport



Transport in a road vehicle	Never carry the product loose in a road vehicle, as it can be affected by shock and vibration. Always carry the product in its transport container and secure it.
Shipping	When transporting the product by rail, air or sea, always use the complete original Leica Geosystems packaging, transport container and cardboard box, or its equivalent, to protect against shock and vibration.
Shipping, transport of batteries	When transporting or shipping batteries, the person in charge of the product must ensure that the applicable national and international rules and regulations are observed. Before transportation or shipping, contact your local passenger or freight transport company.

5.2 Storage

Product	Respect the temperature limits when storing the equipment, particularly in summer if the equipment is inside a vehicle. Refer to "6 Technical Data" for information about temperature limits.
Li-Ion batteries	<ul style="list-style-type: none">• Refer to "6 Technical Data" for information about storage temperature range.• Remove batteries from the product and the charger before storing.• After storage recharge batteries before using.• Protect batteries from damp and wetness. Wet or damp batteries must be dried before storing or use.• A storage temperature range of 0°C to +30°C / +32°F to +86°F in a dry environment is recommended to minimize self-discharging of the battery.• At the recommended storage temperature range, batteries containing a 40% to 50% charge can be stored for up to one year. After this storage period the batteries must be recharged.

5.3 Cleaning and Drying

Product and accessories	<ul style="list-style-type: none">• Use only a clean, soft, lint-free cloth for cleaning. If necessary, moisten the cloth with water or pure alcohol. Do not use other liquids; these may attack the polymer components.
Damp products	Dry the product, the transport container, the foam inserts and the accessories at a temperature not greater than 40°C/104°F and clean them. Remove the battery cover and dry the battery compartment. Do not repack until everything is dry. Always close the transport container when using in the field.

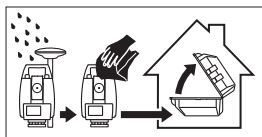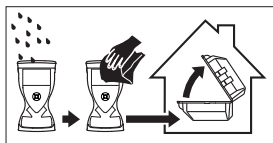

Cables and plugs

Keep plugs clean and dry. Blow away any dirt lodged in the plugs of the connecting cables.

Connectors with dust caps

Wet connectors must be dry before attaching the dust cap.

6

Technical Data

6.1

CS10/CS15 Technical Data

Design Glass reinforced polymer housing with optional integrated battery and radio modem.

Control unit

CS10

Display: VGA (480 x 640 pixels), graphics capable LCD, illumination, touch screen, colour
Keyboard: 26 keys
Touch screen: Toughened film on glass
Sound: Integrated sealed speaker and microphone
Digital camera: Resolution: 1600 x 1200 pixels, fixed focus lens, image capture: JPEG

CS15

Display: VGA (640 x 480 pixels), graphics capable LCD, illumination, touch screen, colour
Keyboard: 65 keys including 12 function keys
Touch screen: Toughened film on glass
Sound: Integrated sealed speaker and microphone
Digital camera: Resolution: 1600 x 1200 pixels, fixed focus lens, image capture: JPEG

Dimensions

Type	Length [m]	Width [m]	Thickness [m]
CS10	0.200	0.102	0.045
CS15	0.245	0.125	0.045

Weight

Type	Weight [kg]/[lbs]
CS10, with battery, internal radio and WLAN	0.720/1.587
CS15, with battery, internal radio and WLAN	0.870/1.918

Recording

Data can be recorded on the SD card, CompactFlash card, USB stick or in the internal memory.

Power

Type	Consumption [W]	External supply voltage
CS10/CS15	2.0	Nominal voltage 12 V DC (---) Voltage range 10.5 V-28 V

Internal battery

Type	Battery	Voltage	Capacity	Operating time, typical*
CS10/CS15	Li-Ion	7.4 V	GEB212: 2.6 Ah	10 h

* Operating time depends on use of wireless communication devices.

Environmental specifications

Temperature

Type	Operating temperature [°C]	Storage temperature [°C]
CS10/CS15	-30 to +60	-40 to +80

Type	Operating temperature [°C]	Storage temperature [°C]
Internal battery	-20 to +55	-40 to +70

Protection against water, dust and sand

Type	Protection
CS10/CS15	IP67 (IEC60529) Dust tight Waterproof to 1 m temporary immersion

Humidity

Type	Protection
CS10/CS15	Up to 100 % The effects of condensation are to be effectively counteracted by periodically drying out CS10/CS15.

Interfaces

Type	RS232	USB Host	USB OTG	Bluetooth	WLAN
CS10/CS15	LEMO port or DSUB9	LEMO port or USB A	LEMO port, USB Mini-AB or docking station contacts	Class 2	802.11b/g

Data format for RS232

The default values are:

Baud rate:	115200
Parity:	None
Terminator:	CR/LF
Data bits:	8
Stop bits:	1

Ports

Type	8 pin LEMO-1	DSUB9	USB A Host	USB Mini	Docking station contacts
CS10/CS15	For power and/or communication	For communication			For power and/or communication

6.2

GS05/GS06 Technical Data

6.2.1

Tracking Characteristics

Instrument technology

SmartTrack+

Satellite reception

Single frequency

Instrument channels

GS05/GS06: Up to 14 channels continuous tracking on L1 (GPS); up to 14 channels continuous tracking on L1 (GLONASS); one channel tracking SBAS.



Depending on the satellite systems and signals configured, a maximum number of 14 channels is allocated.

Supported codes and phases

GPS

Type	L1
GS05/GS06	Carrier phase, C/A-code

GLONASS

Type	L1
GS05/GS06	Carrier phase, C/A-code



Carrier phase and code measurements on L1 (GPS) are fully independent with AS on or off.

Satellites tracked

GS05/GS06: Up to 14 simultaneously on L1 (GPS) + up to 14 simultaneously on L1 (GLONASS) + up to one SBAS

6.2.2

Accuracy



Accuracy is dependent upon various factors including the number of satellites tracked, constellation geometry, observation time, ephemeris accuracy, ionospheric disturbance, multipath and resolved ambiguities.

The following accuracies, given as **root mean square**, are based on measurements processed using LGO and on real-time measurements.

The use of multiple GNSS systems can increase accuracy by up to 30% relative to GPS only.

Differential code

The baseline precision of a differential code solution for static and kinematic surveys is 40 cm. The measurement of accuracy is compliant with ISO 17123-8.

Differential phase in post-processing

Static		Kinematic	
Horizontal	Vertical	Horizontal	Vertical
5 mm + 0.5 ppm	10 mm + 0.5 ppm	10 mm + 1 ppm	20 mm + 1 ppm

6.2.3

Technical Data

Description and use

The table gives a description and the intended use of the GS05/GS06.

Type	Description	Use
GS05	L1 GPS, GLONASS SmartTrack+ antenna.	With CS10 field controller.
GS06	L1 GPS, GLONASS SmartTrack+ antenna.	With CS15 field controller.

Dimensions

Type	Length [m]	Width [m]	Thickness [m]
GS05 with CS10	0.278	0.102	0.045
GS06 with CS15	0.323	0.125	0.045

Connector

5 pin interface port

Weight

Type	Weight [kg]/[lbs]
GS05 with CS10	0.750/1.653
GS06 with CS15	0.910/2.006

Power

Power consumption: 0.5 W typically, 45 mA
 External supply voltage: Nominal 12 V DC (—), voltage range 5 V-28 V DC

Electrical data

Type	GS05/GS06
Voltage	-
Current	-
Frequency	GPS L1 1575.42 MHz GLONASS L1 1602.5625 MHz-1611.5 MHz
Gain	Typically 27 dBi
Noise Figure	Typically < 2 dBi

Environmental specifications**Temperature**

Operating temperature [°C]	Storage temperature [°C]
-30 to +60	-40 to +80

Protection against water, dust and sand

Protection
IP67 (IEC 60529) Dust tight Protected against water jets Waterproof to 1 m temporary immersion

Humidity

Protection
Up to 100 % The effects of condensation are to be effectively counteracted by periodically drying out the antenna.

6.3**CTR16 Technical Data****Description and use**

The CTR16 is a high performance wireless data transfer device operating in the 2.4 GHz frequency band. The CTR16 can be used on CS15 controller only for communication to a total station with RH16 or TCPS29 attached.

Dimensions

Type	Length [m]	Width [m]	Thickness [m]
CTR16	0.131	0.069	0.053

Connector

5 pin interface port

Weight

0.155 kg / 0.342 lbs

Power

Type	CTR16
Power consumption	100 mA nominal (5 V), 200 mA max.
Power supply	From instrument

Environmental specifications**Temperature**

Operating temperature [°C]	Storage temperature [°C]
-30 to +60	-40 to +80

Protection against water, dust and sand

Protection
IP67 (IEC 60529) Dust tight Protected against water jets Waterproof to 1 m temporary immersion

Humidity

Protection
Up to 100 % The effects of condensation are to be effectively counteracted by periodically drying out the CTR16.


6.4**GS08plus/GS12****6.4.1****Tracking Characteristics****Instrument technology**

SmartTrack+

Satellite reception

GS08plus: Dual frequency.
GS12: Triple frequency.

Instrument channels

 Depending on the satellite systems and signals configured, a maximum number of 120 channels is allocated.

Supported codes and phases**GPS**

Type	L1	L2	L5
GS08plus	Carrier phase, C/A-code	Carrier phase, C code (L2C) and P2-code	-
GS12	Carrier phase, C/A-code	Carrier phase, C code (L2C) and P2-code	Carrier phase, code

GLONASS

Type	L1	L2
GS08plus	Carrier phase, C/A-code	Carrier phase, P2-code
GS12	Carrier phase, C/A-code	Carrier phase, P2-code

Galileo

Type	E1	E5a	E5b	Alt-BOC
GS12	Carrier phase, code	Carrier phase, code	Carrier phase, code	Carrier phase, code



Carrier phase and code measurements on L1, L2 and L5 (GPS) are fully independent with AS on or off.

Satellites tracked

GS08plus:	Up to 16 simultaneously on L1, L2 (GPS) + up to 14 simultaneously on L1 and L2 (GLONASS)+ up to four SBAS (EGNOS, WAAS, MSAS, GAGAN)
GS12:	Up to 16 simultaneously on L1, L2 and L5 (GPS) + up to 14 simultaneously on L1 and L2 (GLONASS) + up to 14 simultaneously on E1, E5a, E5b and Alt-BOC (Galileo) + up to four SBAS (EGNOS, WAAS, MSAS, GAGAN)

6.4.2

Accuracy



Accuracy is dependent upon various factors including the number of satellites tracked, constellation geometry, observation time, ephemeris accuracy, ionospheric disturbance, multipath and resolved ambiguities.

The following accuracies, given as **root mean square**, are based on measurements processed using LGO and on real-time measurements.

The use of multiple GNSS systems can increase accuracy by up to 30% relative to GPS only.

Differential code

The baseline precision of a differential code solution for static and kinematic surveys is 25 cm.



The measurement of accuracy is compliant with ISO 17123-8.

Differential phase in post-processing

Static and rapid static

Static		Kinematic	
Horizontal	Vertical	Horizontal	Vertical
5 mm + 0.5 ppm	10 mm + 0.5 ppm	10 mm + 1 ppm	20 mm + 1 ppm

Static with long observations

Static		Kinematic	
Horizontal	Vertical	Horizontal	Vertical
3 mm + 0.5 ppm (GS08plus)	6 mm + 0.5 ppm (GS08plus)	10 mm + 1 ppm	20 mm + 1 ppm
3 mm + 0.1 ppm (GS12)	3.5 mm + 0.4 ppm (GS12)		

Differential phase in real-time

Static		Kinematic	
Horizontal	Vertical	Horizontal	Vertical
5 mm + 0.5 ppm	10 mm + 0.5 ppm	10 mm + 1 ppm	20 mm + 1 ppm

Description and use The table gives a description and the intended use of the GS08plus/GS12.

Type	Description	Use
GS08plus	L1, L2 GPS, GLONASS SmartTrack+ antenna.	With CS10 field controller.
GS12	L1, L2, L5 GPS, GLONASS, Galileo SmartTrack+ antenna.	With CS10 or CS15 field controller.

Dimensions

Type	Height	Diameter
GS08plus	0.071 m	0.186 m
GS12	0.089 m	0.186 m

Connector

- 8 pin LEMO-1
- 5 pin SmartStation clip-on-contacts (GS12 only)

Mounting

5/8" Whitworth

Weight

GS08plus	0.8 kg including internal battery
GS12	1.1 kg including internal battery

Power

Power consumption:	2.0 W typically
External supply voltage:	Nominal 12 V DC (---), voltage range 10.5 V-28 V

Battery internal

Type:	Li-Ion
Voltage:	7.4 V
Capacity:	GEB211: 2.2 Ah GEB212: 2.6 Ah
Typical operating time:	7 h
	The given operating times are valid for
	<ul style="list-style-type: none"> • one fully charged GEB212 battery. • 25°C. Operating times will be shorter when working in cold weather.

Electrical data

Type	GS08plus	GS12
Frequency		
GPS L1 1575.42 MHz	✓	✓
GPS L2 1227.60 MHz	✓	✓
GPS L5 1176.45 MHz	-	✓
GLONASS L1 1602.5625-1611.5 MHz	✓	✓
GLONASS L2 1246.4375-1254.3 MHz	✓	✓
Galileo E1 1575.42 MHz	-	✓
Galileo E5a 1176.45 MHz	-	✓
Galileo E5b 1207.14 MHz	-	✓
Galileo Alt-BOC 1191.795 MHz	-	✓
Gain	Typically 37 dBi	Typically 27 dBi
Noise Figure	Typically < 3 dBi	Typically < 2 dBi

Environmental specifications

Temperature

Operating temperature [°C]	Storage temperature [°C]
-40 to +65 Bluetooth: -30 to +65	-40 to +80

Protection against water, dust and sand

Protection
IP67 (IEC 60529) Dusttight Protected against water jets Waterproof to 1 m temporary immersion

Humidity

Protection
Up to 100 % The effects of condensation are to be effectively counteracted by periodically drying out the antenna.

6.5

Antennas Technical Data

Description and use The table gives a description and the intended use of the antenna.

Type	Description	Use
AS05	L1 GPS, GLONASS SmartTrack+ antenna with built-in ground plane.	With CS10/GS05, CS15/GS06.

Dimensions

Type	AS05
Height	6.2 cm
Diameter	17.0 cm

Connector

AS05: TNC female

Mounting

AS05: 5/8" Whitworth

Weight

AS05: 0.4 kg

Electrical data

Type	AS05
Voltage	4.5 V to 18 V DC
Current	35 mA typical
Frequency	GPS L1 1575.42 MHz GLONASS L1 1602.5625 MHz-1611.5 MHz
Gain (typically)	27 dBi
Noise Figure (typically)	< 2 dBi

Environmental specifications

Temperature

Type	Operating temperature [°C]	Storage temperature [°C]
AS05	-40 to +70	-55 to +85

Protection against water, dust and sand

Type	Protection
AS05	IP67 (IEC 60529) Dust tight Protected against water jets Waterproof to 1 m temporary immersion

Humidity

Type	Protection
AS05	Up to 100 % The effects of condensation are to be effectively counteracted by periodically drying out the antenna.

Cable length

Separation distance from instrument ...	to antenna	Supplied cable lengths [m]
GS05/GS06	AS05	1.2

6.6

Conformity to National Regulations

Conformity to national regulations

For products which do not fall under R&TTE directive:



Hereby, Leica Geosystems AG, declares that the product/s is/are in compliance with the essential requirements and other relevant provisions of the applicable European Directives. The declaration of conformity can be consulted at <http://www.leica-geosystems.com/ce>.

6.6.1

CS10

Conformity to national regulations

- FCC Part 15 (applicable in US)
- Hereby, Leica Geosystems AG, declares that the product CS10 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and other applicable European Directives. The declaration of conformity can be consulted at <http://www.leica-geosystems.com/ce>.



Class 1 equipment according European Directive 1999/5/EC (R&TTE) can be placed on the market and be put into service without restrictions in any EEA member state.

- The conformity for countries with other national regulations not covered by the FCC part 15 or European directive 1999/5/EC has to be approved prior to use and operation.

Frequency band

Type	Frequency band [MHz]
CS10, Bluetooth	2402 - 2480
CS10, RCS	2402 - 2452

Type	Frequency band [MHz]
CS10, 3.5G GSM/UMTS	UMTS/HSDPA (WCDMA/FDD) 850 / 1900 / 2100 Quad-Band EGSM 850 / 900 / 1800 / 1900 GPRS multi-slot class 12 EDGE multi-slot class 12
CS10, WLAN	2400 - 2484

Output power

Type	Output power [mW]
CS10, Bluetooth	2.5
CS10, RCS	< 100
CS10, 3.5G GSM/UMTS EGSM850/900	2
CS10, 3.5G GSM/UMTS GSM1800/1900	1
CS10, 3.5G GSM/UMTS UMTS2100	0.25
CS10, 3.5G GSM/UMTS EDGE850/900	0.5
CS10, 3.5G GSM/UMTS EDGE1800/1900	0.4
CS10, WLAN (802.11b)	50
CS10, WLAN (802.11g) 6 Mbit/s-36 Mbit/s	50
CS10, WLAN (802.11b) 48 Mbit/s-56 Mbit/s	31.6

Antenna

Type	Antenna	Gain [dBi]	Connector	Frequency band [MHz]
CS10, Bluetooth	Integrated antenna	-	-	-
CS10, RCS	Integrated antenna	-	-	-
CS10, 3.5G GSM/UMTS	Integrated antenna	-	-	-
CS10, WLAN	Integrated antenna	-	-	-
GS05	Internal GNSS antenna element (receive only)	-	-	-

6.6.2

CS15

Conformity to national regulations

- FCC Part 15 (applicable in US)
- Hereby, Leica Geosystems AG, declares that the product CS15 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and other applicable European Directives. The declaration of conformity can be consulted at <http://www.leica-geosystems.com/ce>.



Class 1 equipment according European Directive 1999/5/EC (R&TTE) can be placed on the market and be put into service without restrictions in any EEA member state.

- The conformity for countries with other national regulations not covered by the FCC part 15 or European directive 1999/5/EC has to be approved prior to use and operation.

Frequency band

Type	Frequency band [MHz]
CS15, Bluetooth	2402 - 2480
CS15, RCS	2402 - 2452
CS15, 3.5G GSM/UMTS	UMTS/HSDPA (WCDMA/FDD) 850 / 1900 / 2100 Quad-Band EGSM 850 / 900 / 1800 / 1900 GPRS multi-slot class 12 EDGE multi-slot class 12
CS15, WLAN	2400 - 2484

Output power

Type	Output power [mW]
CS15, Bluetooth	2.5
CS15, RCS	< 100
CS15, 3.5G GSM/UMTS EGSM850/900	2
CS15, 3.5G GSM/UMTS GSM1800/1900	1
CS15, 3.5G GSM/UMTS UMTS2100	0.25
CS15, 3.5G GSM/UMTS EDGE850/900	0.5
CS15, 3.5G GSM/UMTS EDGE1800/1900	0.4
CS15, WLAN (802.11b)	50
CS15, WLAN (802.11g) 6 Mbit/s-36 Mbit/s	50
CS15, WLAN (802.11b) 48 Mbit/s-56 Mbit/s	31.6

Antenna

Type	Antenna	Gain [dBi]	Connector	Frequency band [MHz]
CS15, Bluetooth	Integrated antenna	-	-	-
CS15, RCS	Integrated antenna	-	-	-
CS15, 3.5G GSM/UMTS	Integrated antenna	-	-	-
CS15, WLAN	Integrated antenna	-	-	-
GS06	Internal GNSS antenna element (receive only)	-	-	-

6.6.3

CTR16

Conformity to national regulations

- FCC Part 15 (applicable in US)
- Hereby, Leica Geosystems AG, declares that the product CTR16 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and other applicable European Directives. The declaration of conformity can be consulted at <http://www.leica-geosystems.com/ce>.



Class 1 equipment according European Directive 1999/5/EC (R&TTE) can be placed on the market and be put into service without restrictions in any EEA member state.

- The conformity for countries with other national regulations not covered by the FCC part 15 or European directive 1999/5/EC has to be approved prior to use and operation.

Frequency band

CTR16: 2402 - 2480 MHz

Output power

< 100 mW (e. i. r. p.)

Antenna

Type: $\lambda/2$ antenna
Gain: 2 dBi maximal
Connector: None (internal)

6.6.4

GS08plus

Conformity to national regulations

- FCC Part 15, 22 and 24 (applicable in US)
- Hereby, Leica Geosystems AG, declares that the product GS08plus is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and other applicable European Directives. The declaration of conformity can be consulted at <http://www.leica-geosystems.com/ce>.



Class 1 equipment according European Directive 1999/5/EC (R&TTE) can be placed on the market and be put into service without restrictions in any EEA member state.

- The conformity for countries with other national regulations not covered by the FCC part 15, 22 and 24 or European directive 1999/5/EC has to be approved prior to use and operation.

Frequency band

Type	Frequency band [MHz]
GS08plus	1227.60 1575.42 1246.4375 - 1254.3 1602.4375 - 1611.5
Bluetooth	2402 - 2480

Output power

Type	Output power [mW]
GNSS	Receive only
Bluetooth	5 (Class 1)

Antenna

GNSS Internal GNSS antenna element (receive only)
Bluetooth Type: Internal Microstrip antenna
Gain: 1.0 dBi

Conformity to national regulations

- FCC Part 15, 22 and 24 (applicable in US)
- Hereby, Leica Geosystems AG, declares that the product GS12 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The declaration of conformity can be consulted at <http://www.leica-geosystems.com/ce>.



Class 1 equipment according European Directive 1999/5/EC (R&TTE) can be placed on the market and be put into service without restrictions in any EEA member state.

- The conformity for countries with other national regulations not covered by the FCC part 15, 22 and 24 or European directive 1999/5/EC has to be approved prior to use and operation.

Frequency band

Type	Frequency band [MHz]
GS12	1176.45 1191.795 1207.14 1227.60 1246.4375 - 1254.3 1575.42 1602.4375 - 1611.5
Bluetooth	2402 - 2480

Output power

Type	Output power [mW]
GNSS	Receive only
Bluetooth	5 (Class 1)

Antenna

GNSS	Internal GNSS antenna element (receive only)
Bluetooth	Type: Internal Microstrip antenna Gain: 1.5 dBi

Software Licence Agreement

This product contains software that is preinstalled on the product, or that is supplied to you on a data carrier medium, or that can be downloaded by you online according to prior authorisation from Leica Geosystems. Such software is protected by copyright and other laws and its use is defined and regulated by the Leica Geosystems Software Licence Agreement, which covers aspects such as, but not limited to, Scope of the Licence, Warranty, Intellectual Property Rights, Limitation of Liability, Exclusion of other Assurances, Governing Law and Place of Jurisdiction. Please make sure, that at any time you fully comply with the terms and conditions of the Leica Geosystems Software Licence Agreement.

Such agreement is provided together with all products and can also be referred to and downloaded at the Leica Geosystems home page at <http://www.leica-geosystems.com/swlicense> or collected from your Leica Geosystems distributor.

You must not install or use the software unless you have read and accepted the terms and conditions of the Leica Geosystems Software Licence Agreement. Installation or use of the software or any part thereof, is deemed to be an acceptance of all the terms and conditions of such Licence Agreement. If you do not agree to all or some of the terms of such Licence Agreement, you must not download, install or use the software and you must return the unused software together with its accompanying documentation and the purchase receipt to the distributor from whom you purchased the product within ten (10) days of purchase to obtain a full refund of the purchase price.

Open source information

The software on the product may contain copyright-protected software that is licensed under various open source licences.

Copies of the corresponding licences

- are provided together with the product (for example in the About panel of the software)
- can be downloaded on <http://opensource.leica-geosystems.com/viva/smartworx>

If foreseen in the corresponding open source licence, you may obtain the corresponding source code and other related data on

<http://opensource.leica-geosystems.com/viva/smartworx>.

Contact opensource@leica-geosystems.com in case you need additional information.


Appendix A Pin Assignments and Sockets

A.1 CS10/CS15

Description


Some applications require knowledge of the pin assignments for the instrument ports. In this chapter, the pin assignments and sockets for the instrument ports are explained.

Ports at the instrument bottom panel - DSUB9 connector

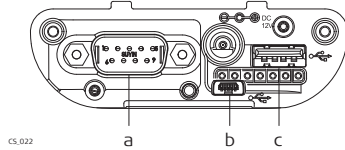


- a) DSUB9 port
- b) USB Mini port
- c) USB A Host port

Ports at the instrument bottom panel - Lemo connector

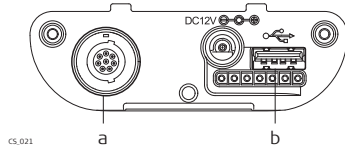


- a) Lemo port (USB and serial)
- b) USB A Host port

 Pin assignments for RS232 serial port



Pin	Signal Name	Function	Direction
1	NC	Not connected	-
2	RxD	RS232, receive data	In
3	TxD	RS232, transmit data	Out
4	NC	Not connected	-
5	GND	Signal Ground	-
6	NC	Not connected	-
7	RTS	RS232, request to send	Out
8	CTS	RS232, clear to send	In
9	NC	Not connected	-

Pin assignments for 8 pin LEMO-1

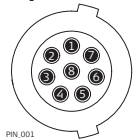


Pin	Signal Name	Function	Direction
1	USB_D+	USB data line	In or out
2	USB_D-	USB data line	In or out
3	GND	Signal ground	-
4	RxD	RS232, receive data	In
5	TxD	RS232, transmit data	Out
6	ID	Identification pin	In or out
7	PWR	Power input, 10.5 V-28 V	In
8	TRM_ON/USB_ID	RS232, general purpose signal	In or out

Sockets

9 pin RS232: RS232, 9 pin, DB9
 8 pin LEMO-1: LEMO-1, 8 pin, LEMO EGI.1B.308.CLN

Description

Some applications require knowledge of the pin assignments for the instrument ports. In this chapter, the pin assignments and sockets for the instrument ports are explained.

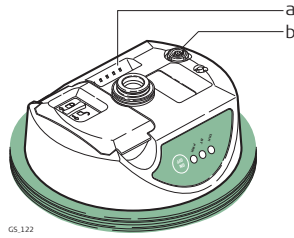Ports at the instrument underside

- a) Clip on contacts (only GS12)
b) Lemo port (USB and serial)

Pin assignments for 8 pin LEMO-1

Pin	Signal Name	Function	Direction
1	USB_D+	USB data line	In or out
2	USB_D-	USB data line	In or out
3	GND	Signal ground	-
4	RxD	RS232, receive data	In
5	TxD	RS232, transmit data	Out
6	ID	Identification pin	In or out
7	PWR	Power input, 10.5 V-28 V	In
8	TRM_ON/USB_ID	RS232, general purpose signal	In or out

Sockets

8 pin LEMO-1: LEMO-1, 8 pin, LEMO EGI.1B.308.CLN

Index

A	
ActiveSync	27
Antenna	
CTR16	49
Antennas	45
GS08plus	49
GS12	50
Operating Temperature	46
Storing Temperature	46
Type	45
B	
Batteries	
Charge in CS10/CS15	31
Charge in GS08plus/GS12	31
Charging, first-time use	30
Operation, Discharging	30
Battery	
Change	30
Internal, GS08plus	44
Internal, GS12	44
Storage temperature	39
Bluetooth	
LED on CS10	33
LED on CS15	33
LED on GS08plus	34
LED on GS12	34
C	
CompactFlash card	
Insert	32
Memory device	17
Remove	32
Connector	
GS05	40, 41
GS06	40, 41
GS08plus	44
GS12	44
Connector, antennas	45
CS	
Available models	15
Display foil	24
Docking Station	20, 26
Firmware for all CS models	15
Lock keyboard	29
Operating principles	23
Power Options menu	29
Stand-by mode	29
System components	15
Unlock keyboard	29
CS10	
Operating temperature	38
Status	33
Storage temperature	38
Underside	19
Upside	18
CS15	
Operating temperature	38
Status	33
Storage temperature	38
Underside	20
Upside	19
CTR16	
Operating Temperature	42
Storage Temperature	42
D	
Data transfer	18
Definition of Use	7
Description of the system	15
Digital Camera	35
Dimensions	
Antennas	45
GS08plus	44
GS12	44
SmartAntenna	40
Display foil	24
Docking Station	
Components	20
Mounting	26
Documentation	2
Drive	
PC card, on office computer	18
E	
Electrical data	
GS08plus	44
GS12	44
Electrical Data	
GS05	41
GS06	41
Electrical data, antennas	45
Environmental specifications	
Antenna	46
GS05	41
GS06	41
GS08plus	45
GS12	45
F	
FCC Statement	12

Frequency band		Keys	
GS08plus	49	Alpha keys	21
GS12	50	Arrow keys	22
Frequency Band		Backspace key	21
CTR16	49	Caps Lock	21
G		Description of	21
GEB211 (internal battery)		ENTER key	22
Operating temperature	39	ESC key	21
GEB212 (internal battery)		Favourites	22
Operating temperature	39	Fn key	21
GS		Function keys	21
Firmware for GS05/GS06	16	Home	22
Firmware for GS08plus/GS12	16	Hot keys	21
GS05		Numeric keys	21
Operating Temperature	41	OK	22
Storage Temperature	41	ON/OFF	22
GS06		SPACE key	22
Operating Temperature	41	L	
Storage Temperature	41	Labelling	
GS08plus		CS10	13
Components	20	CS15	13
Status	34	CTR16	13
GS12		GEB211	14
Components	20	GEB212	14
Status	34	GS05	13
H		GS06	13
Hand strap	24	GS08plus	14
Handheld GNSS	26	GS12	14
I		LED	
Indicators, LED		CS10, description	33
CS10	33	CS15, description	33
CS15	33	CTR15, description	34
CTR16	34	GS08plus, description	34
GS08plus	34	GS12, description	34
GS12	34	Light Emitting Diode	
Insert		CS10	33
CompactFlash card	32	CS15	33
SD card	32	CTR16	34
SIM card	25	GS08plus	34
Internal memory		GS12	34
Memory device	18	Li-Ion battery	44
K		Storage	36
Key combinations		M	
Description of	22	Memory device	
Keyboard		Available	17
CS10 Graphical overview	21	Microsoft ActiveSync	27
CS15 Graphical overview	21	Mount, antennas	45
Operating principles	23	Mount, GS08plus	44
		Mount, GS12	44

O		Screenshot	
Operating Temperature		Take a	22
Antennas	46	SD card	
CS10	38	Insert	32
CS15	38	Memory device	17
CTR16	42	Remove	32
GEB211 (internal battery)	39	SIM card	
GEB212 (internal battery)	39	Insert	25
GS05	41	Remove	25
GS06	41	Slot Cover	25
GS08plus	45	Software	
GS12	45	Upload	16
Output power		Software Licence Agreement	51
GS08plus	49	Specifications, environmental	
GS12	50	Antennas	46
Output Power		CTR16	42
CTR16	49	GS05	41
		GS06	41
		Status, CS10	33
P		Status, CS15	33
PC card drive on office computer	18	Status, CTR16	34
Pin Assignment	52	Status, GS08plus	34
Power		Status, GS12	34
GS05	41	Storage Temperature	
GS06	41	CS10	38
GS08plus	44	CS15	38
GS12	44	CTR16	42
Power LED		For internal battery GEB211	39
CS10	33	For internal battery GEB212	39
CS15	33	GS05	41
GS08plus	34	GS06	41
GS12	34	GS08plus	45
Power supply	17	GS12	45
		Storing Temperature	
		Antennas	46
R			
Radio Modem		T	
Available radios	15	Technical Data	
Recording	38	CS10	38
Remove		CS15	38
CompactFlash card	32	CTR16	41
SD card	32	Dimensions	38
SIM card	25	Display and keyboard	38
Reset		Environmental specifications	38
Options	29	GS05	39
Responsibilities	7	GS06	39
Robotic setup	27	Interface	39
		Internal battery GEB211	38
S		Internal battery GEB212	38
Safety Directions	6	Ports	39
Satellite reception	42	Power supply	38
Screen brightness		Weight	38
Decrease	22		
Increase	22		

Temperature range	
Product, drying	36
Temperature, charging internal battery	30
Touch screen	
Turn off	29
Turn on	29
Touch Screen, operating principles	23
TPS radio LED on CTR16	34
Tracking LED	
GS08plus	34
GS12	34
Transfer data	18
U	
Upload software	16
USB stick	
Memory device	18
User Interface	21
User Manual	
Validity of	2
V	
Volume	
Decrease	22
Increase	22
W	
Weight	
Antennas	45
GS05	41
GS06	41
GS08plus	44
GS12	44
Windows CE	
Reset registry	29
Restart	29
Windows Mobile Device Center	27
WLAN	15

Total Quality Management: Our commitment to total customer satisfaction.



Leica Geosystems AG, Heerbrugg, Switzerland, has been certified as being equipped with a quality system which meets the International Standards of Quality Management and Quality Systems (ISO standard 9001) and Environmental Management Systems (ISO standard 14001).

Ask your local Leica Geosystems dealer/sales representative for more information about our TQM program.

772386-6.0.0en

Original text

Printed in Switzerland

© 2013 Leica Geosystems AG, Heerbrugg, Switzerland

Leica Geosystems AG
Heinrich-Wild-Strasse
CH-9435 Heerbrugg
Switzerland
Phone +41 71 727 31 31
www.leica-geosystems.com

- when it has to be **right**

Leica
Geosystems